

INSTALLATION INSTRUCTIONS BUZZER WITH BRACKET (P/N 44238)

Read and understand these instructions completely before installation is attempted.

TABLE OF CONTENTS	PAGE
I. TOOLS REQUIRED	1
II. INSTRUCTIONS.....	1
A). BUZZER ASSEMBLY (P/N 45208).....	1
B). BUZZER ASSEMBLY INSTALLATION	2
C). BUZZER ASSEMBLY CONNECTION.....	2

- This procedure is intended to cover Ricon, Buzzer with Bracket Kit installation.
- Manufacturers have their own installation procedures or method of installing the Buzzer with Bracket Kit. Technical aspects of this process must be followed for any manufacturer using the Ricon Kit Buzzer.


I. TOOLS REQUIRED

- Philips screwdriver or equivalent
- Pliers (round nose)
- Proper lighting is recommended for proper installation and accurate visual inspection.

II. INSTRUCTIONS

A. BUZZER ASSEMBLY (P/N 45208)

1. Assembly Bracket (P/N 38393).
2. Buzzer (P/N 45209).
3. Flat Screw #6-32 x ½ (P/N 28056).
4. Nut #6-32 (P/N 28324).

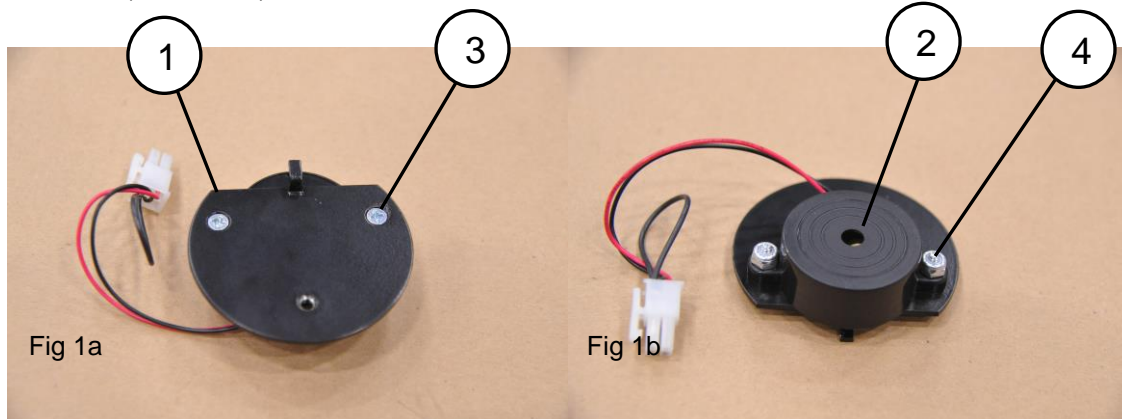

B. BUZZER ASSEMBLY INSTALLATION

1. Remove power from lift.
2. Remove pump cover.
3. Insert pre-assembled Buzzer Kit Pin 5 into Pump Chassis, as shown in Fig 2A.
4. Secure Buzzer Kit by inserting Screw #10-24 x 3/8lg Type F Zinc plated (P/N 33208) into pre-drilled hole then tighten.

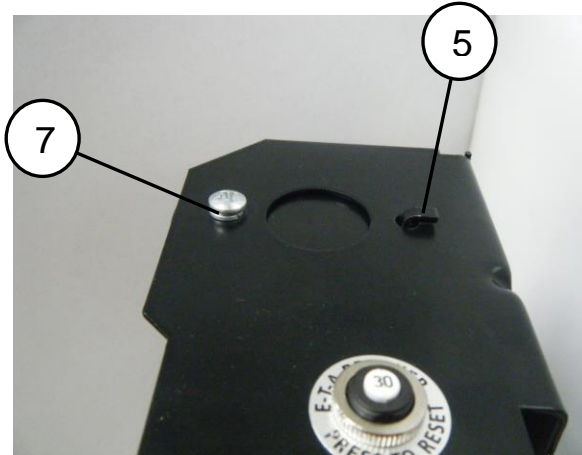


Fig 2A.

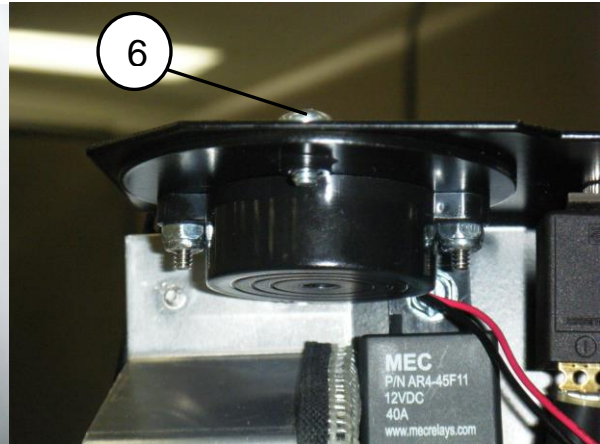


Fig 2B.

C. BUZZER ASSEMBLY CONNECTION

1. Plug Buzzer Assembly connector to Main Harness, as shown in Fig 3.

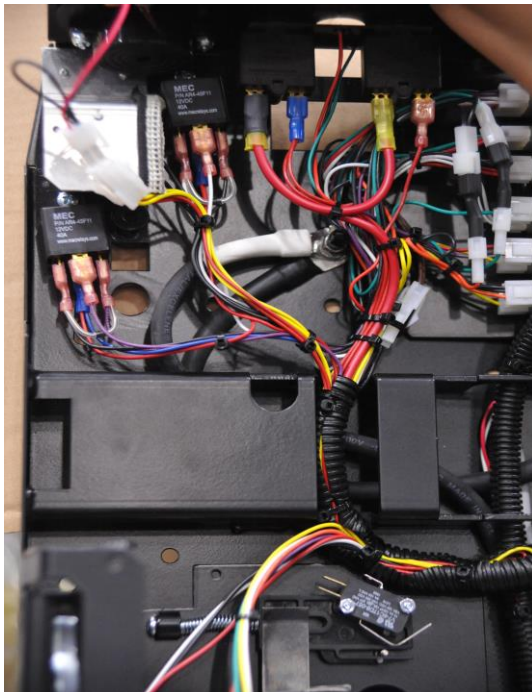


Fig 3.

2. Test buzzer by applying power to lift.
3. Deploy platform to vehicle floor level.
4. Hold open each rollstop ski actuator and listen for alarm buzzer to sound.
5. Install Pump cover.